



SOUND LEISURE : MANUFACTURERS OF HIGH QUALITY JUKEBOXES

For any further information or technical support please call soundleisure :
Sound Leisure Limited
Sandreas Way
Leeds
LS15 8AR

T: +44 (0) 113 232 1700
F: +44 (0) 113 232 1701
E: sales@classicjukeboxes.co.uk
www.classicjukeboxes.co.uk
www.soundleisure.com

Twitter : @classicjukebox
Facebook.com/classicjukeboxes

SOUND

by soundleisure
ClassicJukeboxes.co.uk



ROCKET 88 USER MANUAL

V1.0 March 2012



SOUND LEISURE : MANUFACTURERS OF HIGH QUALITY JUKEBOXES

Contents

Section1 - Introduction	Pg 2
Section2 - Taking Delivery	Pg 3
Section3 - Inserting title cards and compact discs	Pg 4
Section4 - Playing the jukebox	Pg 6
Section 5 - iPod Accessory Operation	Pg 8
Section 6 - Altering the tone of your jukebox, Bass / Treble	Pg 9

Section 1- Introduction

Thank you for buying a classic jukebox from Sound Leisure, the world's premier jukebox manufacturer. This product is built to give you many years of enjoyment and trouble free use.

This owner's guide provides all the information you will need to install and operate the jukebox.




● **Audio Inputs
Video Outputs
Reset Switch**

● **Remote Control
Storage**

● **Locking Mechanism, Key Locks.
Please note: There is a locking
mechanism and key lock on both
sides of the jukebox**

● **Mains Power Input. On/Off Switch**

Jukebox shown in transit mode as delivered

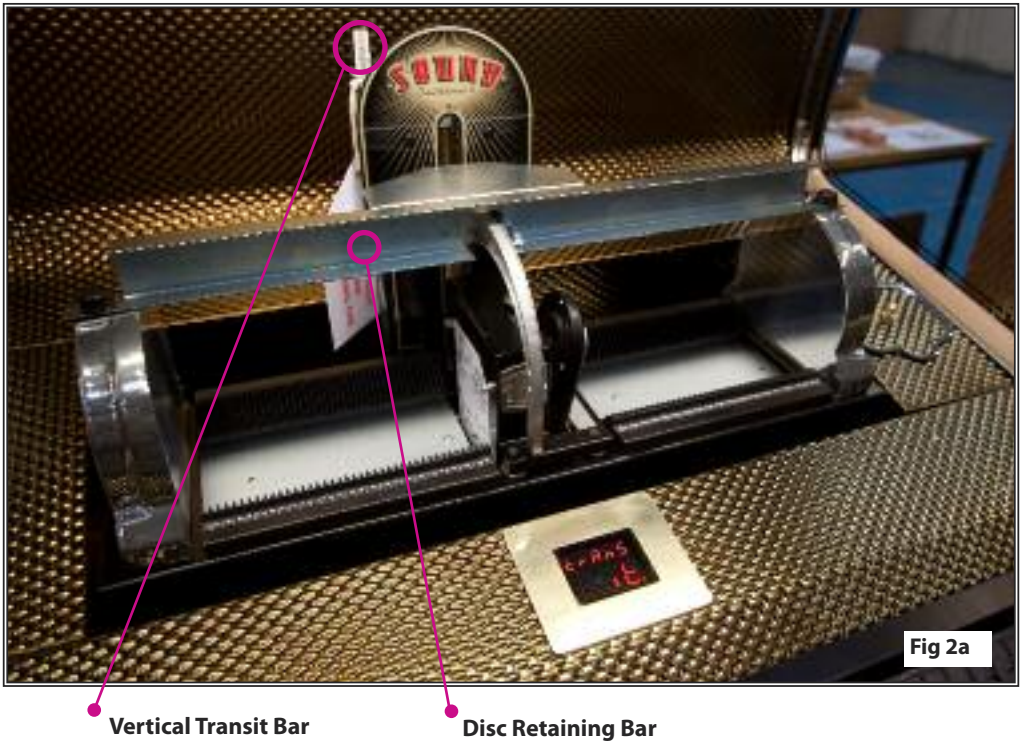

Section 2 - Taking Delivery

The keys to open the jukebox will be found attached to the rear of the cabinet. The keys (ref. CPS15) will open the 2 side locks (see fig. 1a), and the rear cabinet lock (see fig. 1b), plus the side cash box door.

Unlock the 2 side locks, and then lift the glass front cover until it clicks into the 'safe' position.

Remove the horizontal transit bar (see fig. 2a) by unscrewing the black capped screws at either end. Remove the bar and re-insert the screws. Unscrew the vertical transit bar (see fig. 2a). Both these transit bars should be retained for future use.

Plug the jukebox in and switch on (see fig. 3). The front display will show "TRANSIT".




Open the rear cabinet door and locate the transit switch (see fig. 4). Switch DOWN to 'OPERATE' mode, the CD lifting mechanism will traverse to the left, and then return to its central position.

Locate the 4 wing nuts underneath the CD mechanism (see fig. 4). Unscrew the wing nuts until they spin freely, (this helps the mechanism 'float', for optimum performance).

Close and lock the rear cabinet door.

The jukebox is now ready to play.

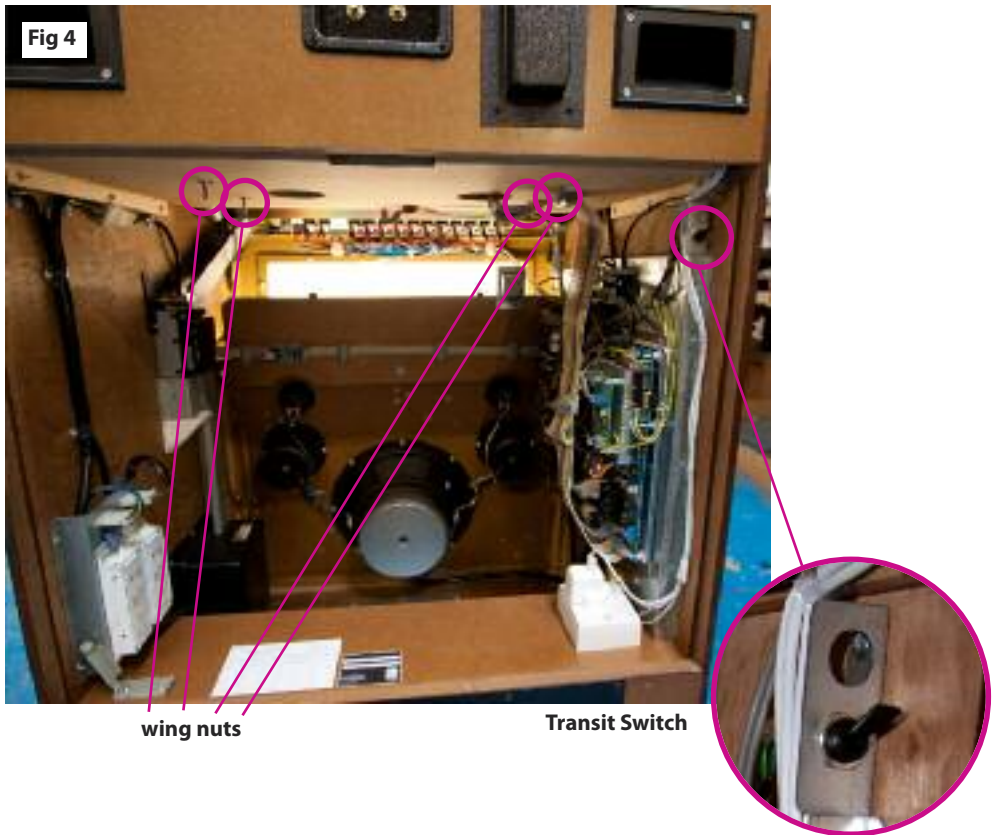

Section 3- Inserting title cards and compact discs.

Title cards.

Blank CD title cards, and a software CD are provided with your jukebox. This will help to print title cards, without having to type each song individually, or save handwriting the cards. Please note : The CD software is unable to read home produced compilation albums.

The title cards start at selection no. 100 and finish at 179.

The cards need to be inserted into the holders, so that the small plastic tabs hold them in place, (see fig. 7). The displayed cards are flipped over left/right using the arrowed ◀/▶ keys on the jukebox keyboard.

Compact Discs.

The rack that holds the CDs is numbered to correspond with the title selection cards.

Slot 00 = title card 100

Slot 01 = title card 101

Slot 02 = title card 102 etc.

Insert the CDs with the CD label facing to the right, (see fig. 5a). The mechanism holds 80CDs.

**PLEASE ENSURE THAT
THE CDs ARE INSERTED
ABSOLUTELY STRAIGHT.**

This prevents the CD lifting mechanism mishandling CDs when loading. If the jukebox is moved for any reason, please check again that all the CDs are aligned correctly, and none have been displaced.



Section 4 - Playing the Jukebox

Making selections.

When the discs and labels are installed, song titles can be selected using the keyboard at the front of jukebox, or via the remote control. As a precaution against overloading the speakers when switching the jukebox on, the volume is reset to a very low level. To raise the volume to the preferred level, select a track, wait until the CD is playing, then adjust the volume using the 'Vol ▲ ▼' buttons on the remote control unit. For remote control instructions, *see fig 6A*.

To play a track, select the 3 digit number for the disc, and then the 2 digit number of the individual track.

To play the whole of an album without keying all the tracks, select the 3 digit disc number on the remote control, then press '00'. To cancel this command, select 'EJECT DISC'.

For continuous random play, press 'SHUFFLE ON' on the remote. To remove this facility, press 'SHUFFLE OFF'. To eject any track playing, select 'EJECT TRACK' on the remote.

Please note: If the door is opened while the jukebox is playing, the CD will reject and the 'arm' will return to it's central position.

Additionally please note that the buttons on the remote referring to colour on // off // hold on and hold off refer to jukeboxes fitted with a diamond pack lighting system - the Rocket 88 does not feature this.

Fig 6a



Section 5 - iPod Docking station accessory.

Important: please take care when inserting the iPod into the docking station, to ensure that the connections are not damaged.

An iPod dock is fitted on the front shelf, and an 'Apple' kit is located inside the jukebox. In this kit is a dedicated iPod remote control (see fig. 7a).

To operate, place the iPod in the dock and select a programme to play. Use the jukebox remote control to set the master volume. Please note, if a CD is playing, this will take priority over the iPod. Eject the track playing and cancel any further CD selections. The iPod should now be audible.

The iPod remote control has pause, select next or previous track, and volume controls.


If you have video tracks downloaded on the iPod, the video content can be shown on an external TV, by taking a cable from the 'Video Out' socket at the rear of the jukebox, and connecting this to one of the auxiliary Video Inputs on the TV set.



Fig 7a

Section 6. Adjusting the Jukebox tone

Adjusting the tone of the jukebox can be made by rotating the wheels denoted in Fig 12. There are 2 channels, each with a bass and a treble control.

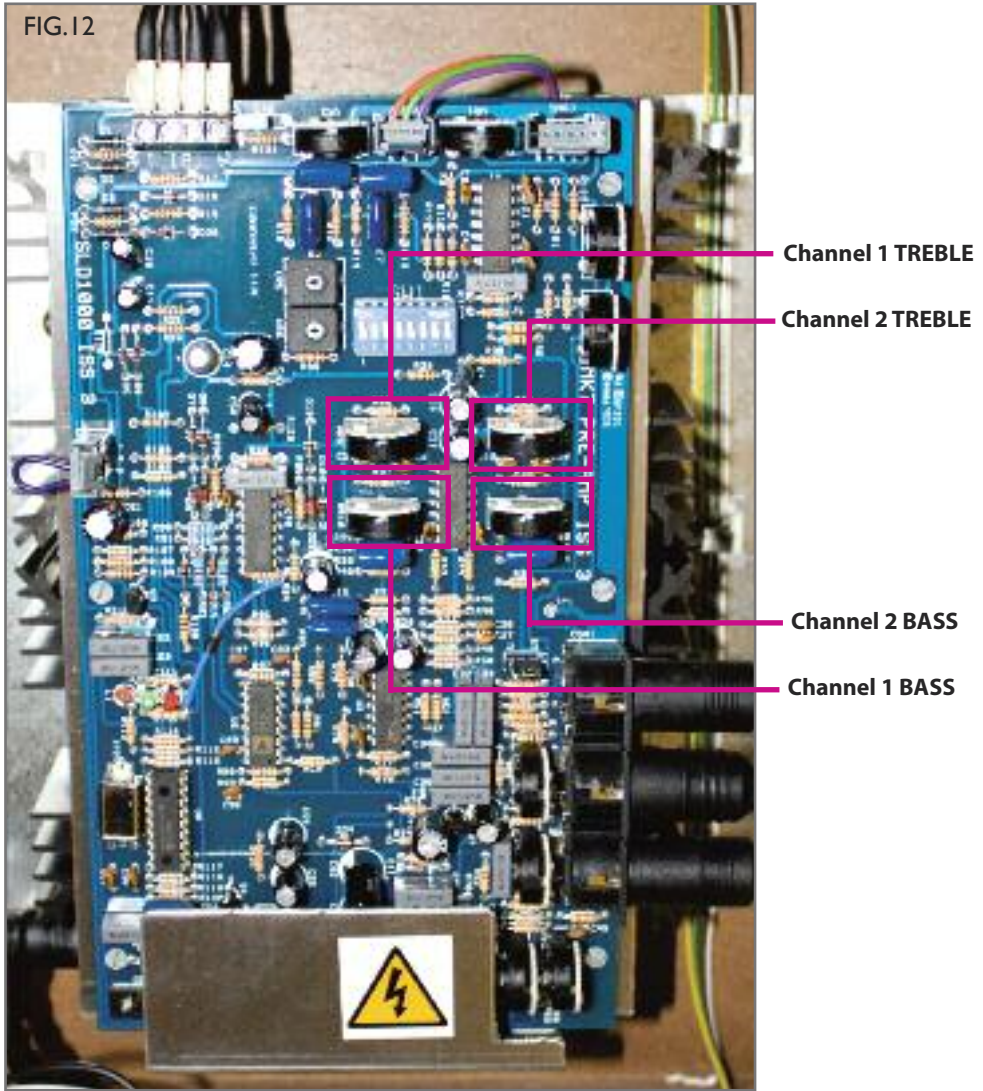

NOTES

NOTES