

# Retro Arcade Cocktail Table

## Operating Instructions and service manual This manual applies to the Retro 60 cocktail arcade table

Welcome to the Retro 60 range of arcade machines, these retro styled arcade machines have been built in the UK from quality parts, we hope that you will have many years of trouble free enjoyment from them.

### Start up

The machines are extremely simple to operate and only need to be plugged in and switched on at the mains plug. The machine will then go through a self test procedure. You should see it counting up from 1 - 60 in the left hand corner of the screen as it tests each game in turn.

### Game selection and play.

- Once the self test has finalised you will be presented with a screen showing pictures of the games. The games are displayed six to a page and there are ten pages.
- On the Coin-op machine you must insert a coin to enable game selection.
- On the freeplay machine you must press the player 1 or player 2 start button before selecting a game, once pressed all but the currently selected game will 'grey out'.
- You can move from game to game using the joystick. As you move through the games the currently selected game will appear in full colour with the others being 'greyed out'.
- To get a preview of the currently selected game press the 'fire' button sometimes this is labelled as 'A' but it is always the bottom left of the group of three buttons.
- To cancel the preview press the 'A' button again.
- To start a game in single player mode press the player one start button. To start a two player game press the player two start button, these are the white buttons on either end of the machine with one or two little black men on them respectively.
- Please note that you cannot end a game once initiated, other than by losing all your lives.

### Setup and configuration.

- All of the Retro 60 machines have the setup mode, the only difference is the location of the setup button.
- On the freeplay cocktail tables this is a black button located to the left of the player 1 control panel.
- On the Coin Operated cocktail machines it is located inside the machine and to the right of the coin door.
- On the Freeplay Upright machine it is above the screen to the left hand side.
- On the Coin Operated Upright machine it is located inside the coin door to the left.

To enter setup mode the setup button must be depressed whilst switching on the machine, the button must be kept pressed in until you see text scrolling down the screen.

The configuration system consists of a number of screens, firstly a series of main configuration options, and then a separate screen for each of the 60 games. Then there is the volume setting screen, then finally an input test screen.

A separate booklet is provided detailing all of the possible settings. Please be aware that whilst it is not possible to damage the machine in any way, by altering these settings a freeplay machine set to coin-op mode will become unresponsive.

### Maintenance and care

The machines should be cleaned using a mild detergent only.

The following usage guidelines must be adhered to:

- Do not operate in extreme heat conditions over 40 degrees Celsius
- Do not operate in extreme humidity
- Do not operate during thunder storms
- Keep upright at all times
- Do not block the cooling fan



For any further information or technical support please call  
Sound Leisure Limited, Sandeas Way, Leeds, LS15 8AR

T: +44 (0) 113 232 1700

E: [sales@classicjukeboxes.co.uk](mailto:sales@classicjukeboxes.co.uk)

[www.classicjukeboxes.co.uk](http://www.classicjukeboxes.co.uk)