

## Bluetooth User Guide for a Series 2 Jukebox



### **Pair Instructions**

To pair an audio device to the Bluetooth accessory:

1. Ensure the LED on the front of the Bluetooth accessory is solid red.  
If the LED is not solid red, press the button on the front of the accessory to enter pairing mode.
2. Turn on the Bluetooth connection on your audio device and begin searching for devices (refer to your audio device manual for instruction on how to do this).
3. From the list of found devices, select 'SoundLeisureJB'.  
If your audio device asks for a confirmation, press ok  
If your audio device asks for a password, enter '1234'.
4. Once pairing is complete, the LED on the front of the Bluetooth accessory will begin to flash green.
5. The LED will change to solid green, when audio is being played on your audio device.

To pair to a new device:

Press the button on the front of the Bluetooth accessory to unpair your connected device or unpair using your audio device (refer to your audio device manual for instruction on how to do this).


The LED on the front of the Bluetooth accessory will change to solid red when unpaired.

To connect to a new device repeat the pairing procedure above.


Please set your audio streaming device's volume to three quarters or above.

### **Jukebox Auxiliary Switching**

The jukebox will switch to the Bluetooth accessory automatically when a CD is not being played. By default it will take 10 seconds before the Bluetooth audio is heard.

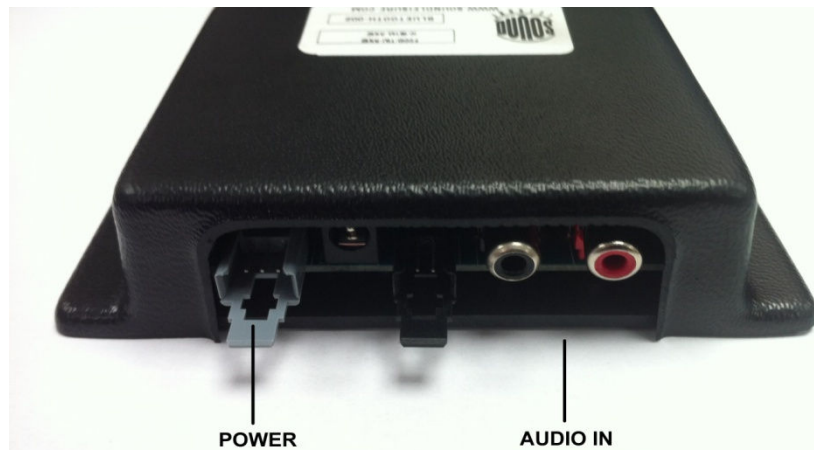

There are two leads supplied with the Bluetooth accessory.

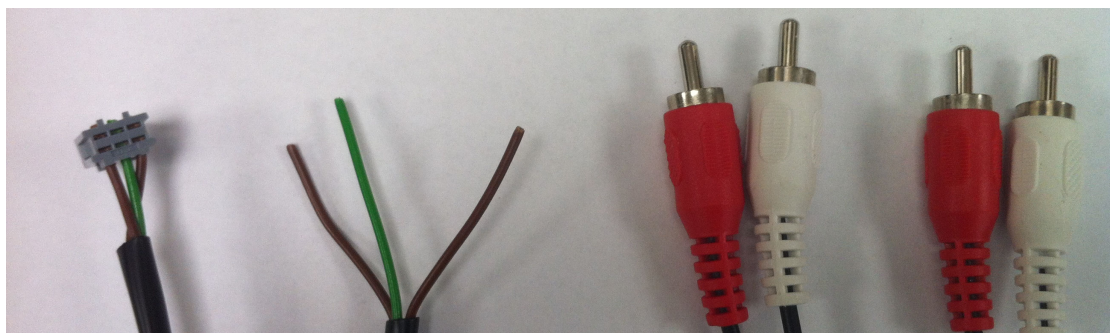

#### Audio Lead

The audio lead connects to the back of the Bluetooth accessory via the 2 x phono plugs. The other end of this lead connects to the AUX 1 Input on the amplifier.



### **Power Lead**

The power lead connects to the back of the Bluetooth accessory via the 3 pin Stocko plug.

The power lead is fitted to the Jukebox as standard. The location of the power lead differs between Jukebox models.

### **1015, 1015 Slimline, Manhattan, Gazelle:**

The power lead is located on the shelf below the CD mechanism, to the right of the processor board.

### **Rocket:**


The power lead is located in the back of the Jukebox below the processor board.

### **Melody:**

The power lead is located in the rear compartment of the Jukebox at the right-hand side.

If for any reason you are unable to locate the power lead that is pre-wired into your Jukebox, you can use the power lead provided in the Bluetooth accessory kit.

Locate the Speaker Light Power Plate in the Jukebox. Connect the brown cables to the opposite sides of the connector and connect the green cable to any green & yellow cable on the connector.

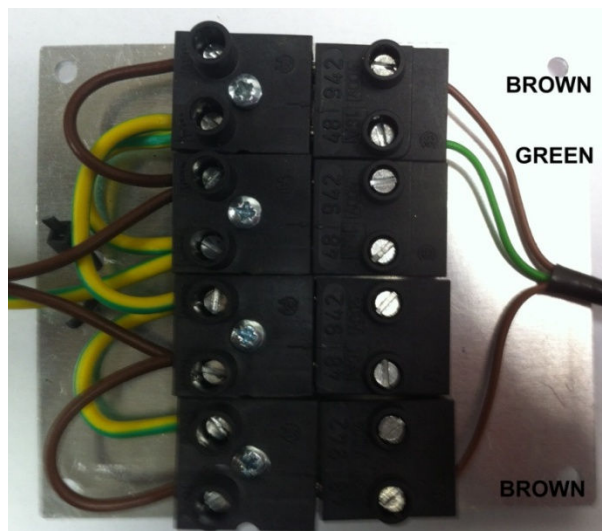

If you have any problems fitting or operating the Bluetooth accessory in your Jukebox, please contact Sound Leisure for technical support.