

Bluetooth User Guide



Pair Instructions

To pair an audio device to the Bluetooth accessory:

1. Ensure the LED on the front of the Bluetooth accessory is solid red.
If the LED is not solid red, press the button on the front of the accessory to enter pairing mode.
2. Turn on the Bluetooth connection on your audio device and begin searching for devices (refer to your audio device manual for instruction on how to do this).
3. From the list of found devices, select 'SoundLeisureJB'.
If your audio device asks for a confirmation, press ok
If your audio device asks for a password, enter '1234'.
4. Once pairing is complete, the LED on the front of the Bluetooth accessory will begin to flash green.
5. The LED will change to solid green, when audio is being played on your audio device.

To pair to a new device:

Press the button on the front of the Bluetooth accessory to unpair your connected device or unpair using your audio device (refer to your audio device manual for instruction on how to do this).

 
The LED on the front of the Bluetooth accessory will change to solid red when unpaired.

To connect to a new device repeat the pairing procedure above.


Please set your audio streaming device's volume to three quarters or above.

Jukebox Auxiliary Switching

The jukebox will switch to the Bluetooth accessory automatically when a CD is not being played. Depending on the type of Jukebox amplifier, it could take anywhere between 5 seconds and 1 minute for the Bluetooth audio to be heard.

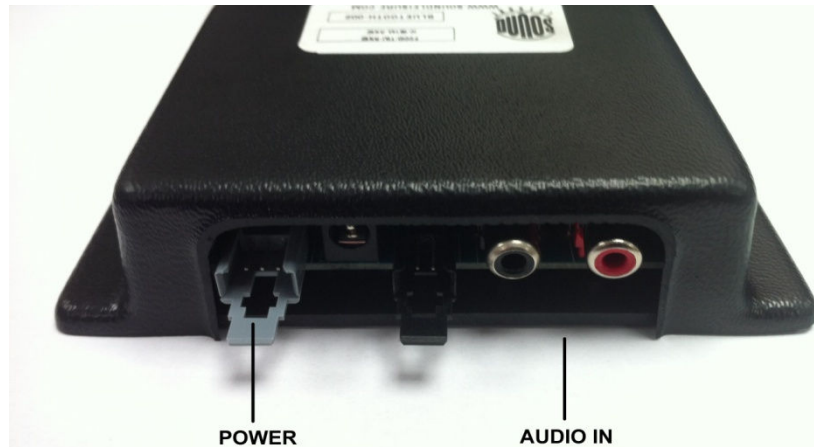

 There are two leads supplied with the Bluetooth accessory.

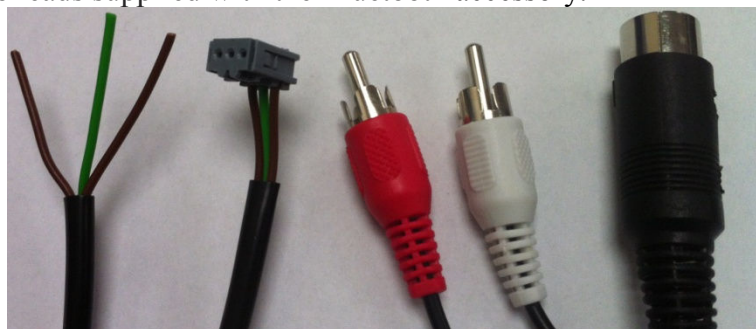

Audio Lead

The audio lead connects to the back of the Bluetooth accessory via the 2 x phono plugs. The other end of this lead connects to the AUX input labelled CONN2 on the amplifier.



Power Lead

The power lead connects to the back of the Bluetooth accessory via the 3 pin Stocko plug.

 
The other end of the power lead will screw into the Wall Box Distribution Board or the Speaker Light Power Plate.

Wall Box Distribution Board

Locate the Wall Box Distribution Board in the Jukebox, on this board there are 3 connector strips, each labelled 1, 2, 3, A and B.


Connect one of the brown cables into terminal 1 and the other brown cable into terminal 3.

Connect the green cable into terminal 2.

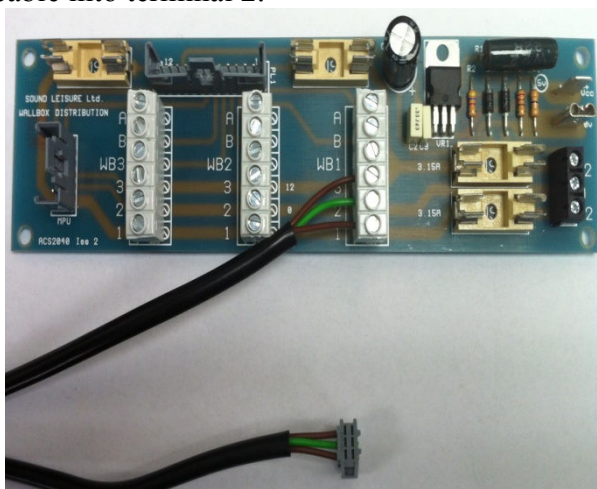

Speaker Light Power Plate

 Locate the Speaker Light Power Plate in the Jukebox. Connect the brown cables to the opposite sides of the connector and connect the green cable to any green & yellow cable on the connector.

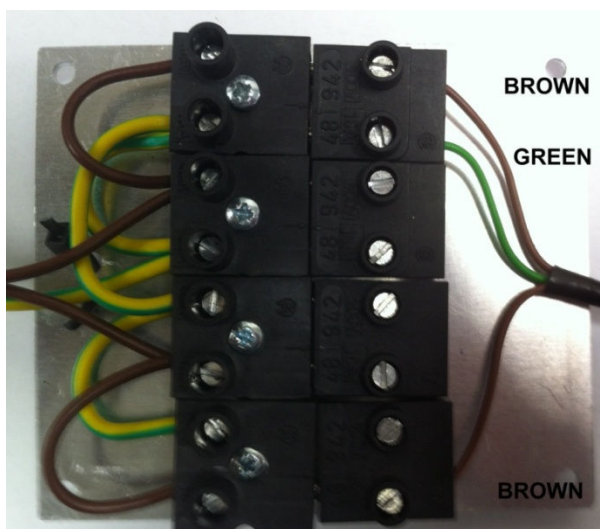

If you have any problems fitting or operating the Bluetooth accessory in your Jukebox, please contact Sound Leisure for technical support.